

# Disdrometer software configuration

## OTT Parsivel 2

### Plan

I.	ASDO software .....	2
1.	ASDO software set-up .....	2
2.	ASDO software licence number.....	2
II.	ASDO configuration .....	3
1.	"Database" page .....	3
2.	"Export" data page.....	3
	• Output format.....	3
	• Variables and column order .....	3
	• Automatic daily file configuration.....	4
	• Data sampling and serial port.....	4
3.	Serial port configuration page : .....	5
4.	Export parameter page .....	6

### List of figures

Figure 1. OTT ASDO software set-up page .....	2
Figure 2. Licence key page .....	2
Figure 3. Database configuration page .....	3
Figure 4. Output data format export page .....	3
Figure 5. Output data selection page .....	4
Figure 6. Automatic export file configuration page .....	4
Figure 7. Data visualization page .....	5
Figure 8. Serial port configuration page .....	5
Figure 9. System parameter configuration page .....	6
Figure 10. Export configuration page .....	6

## I. ASDO software

---

### 1. ASDO software set-up

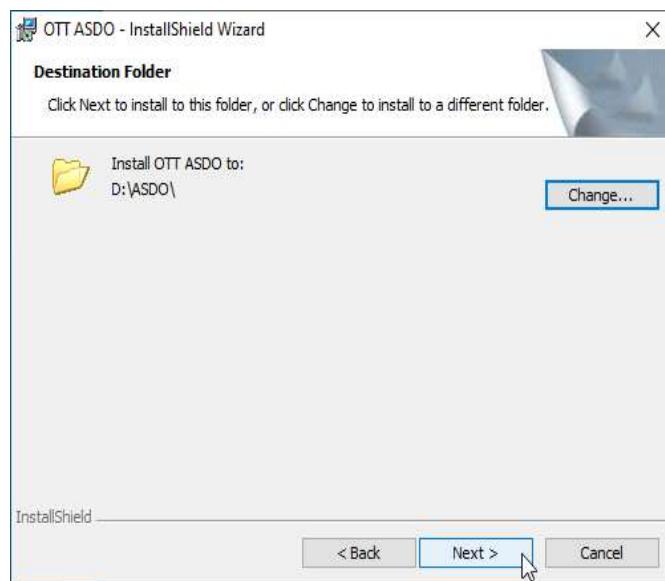


Figure 1. OTT ASDO software set-up page

### 2. ASDO software licence number

Run the ASDO software and write de license number


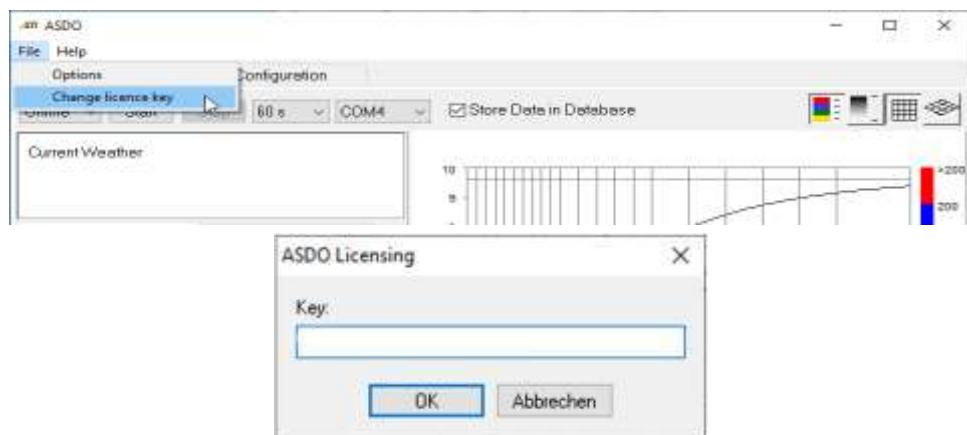


Figure 2. Licence key page

## II. ASDO configuration

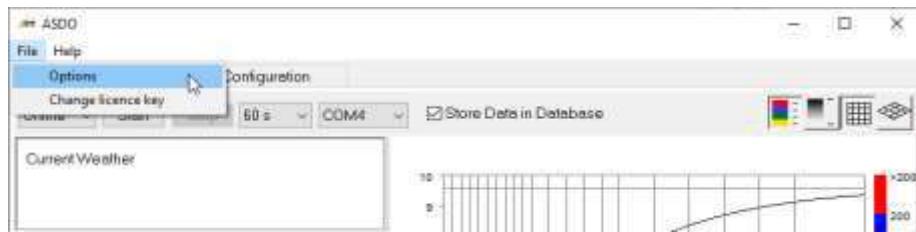

### 1. "Database" page

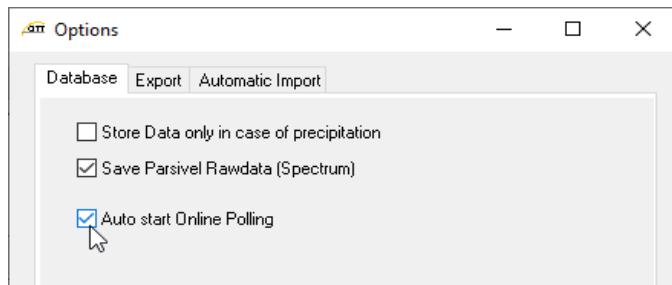


Figure 3. Database configuration page

Option "Auto start Online Polling" allows to launch the acquisition automatically when starting ASDO (new with version 1.15)

### 2. "Export" data page

- Output format

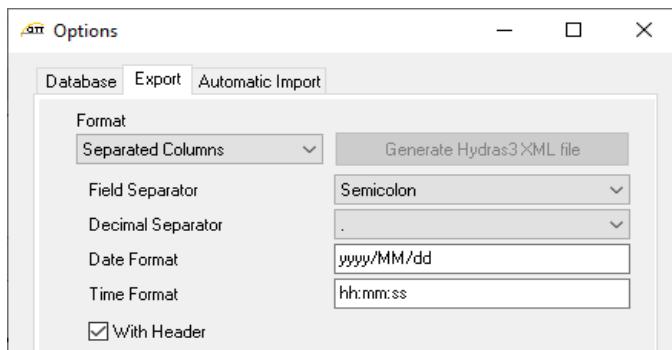


Figure 4. Output data format export page

- Variables and column order

1	Date*
2	Time*
3	Intensity of precipitation (mm/h)
4	Precipitation since start (mm)
5	Radar reflectivity (dBz)
6	MOR Visibility (m)
7	Signal amplitude of Laserband
8	Number of detected particles

9	Temperature in sensor (°C)
10	Heating current (A)
11	Sensor voltage (V)
12	Kinetic Energy
13	Snow intensity (mm/h)
14	Weather code SYNOP WaWa
15	Weather code METAR/SPEC
16	Weather code NWS
17	Spectrum*

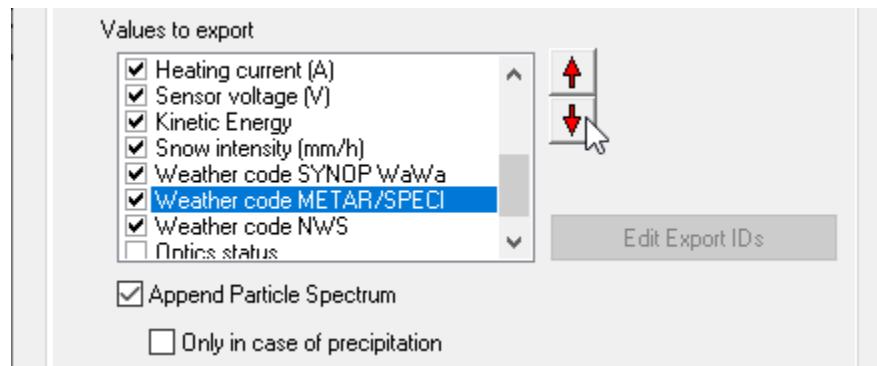


Figure 5. Output data selection page

- Automatic daily file configuration

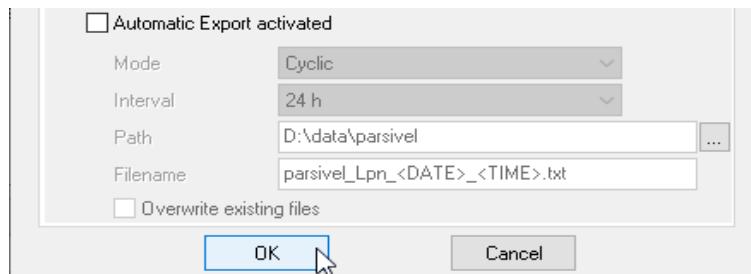


Figure 6. Automatic export file configuration page

- Data sampling and serial port

On data page selection:

- Data sampling frequency = 60s.
- The corresponding serial port.
- Store Data in Database

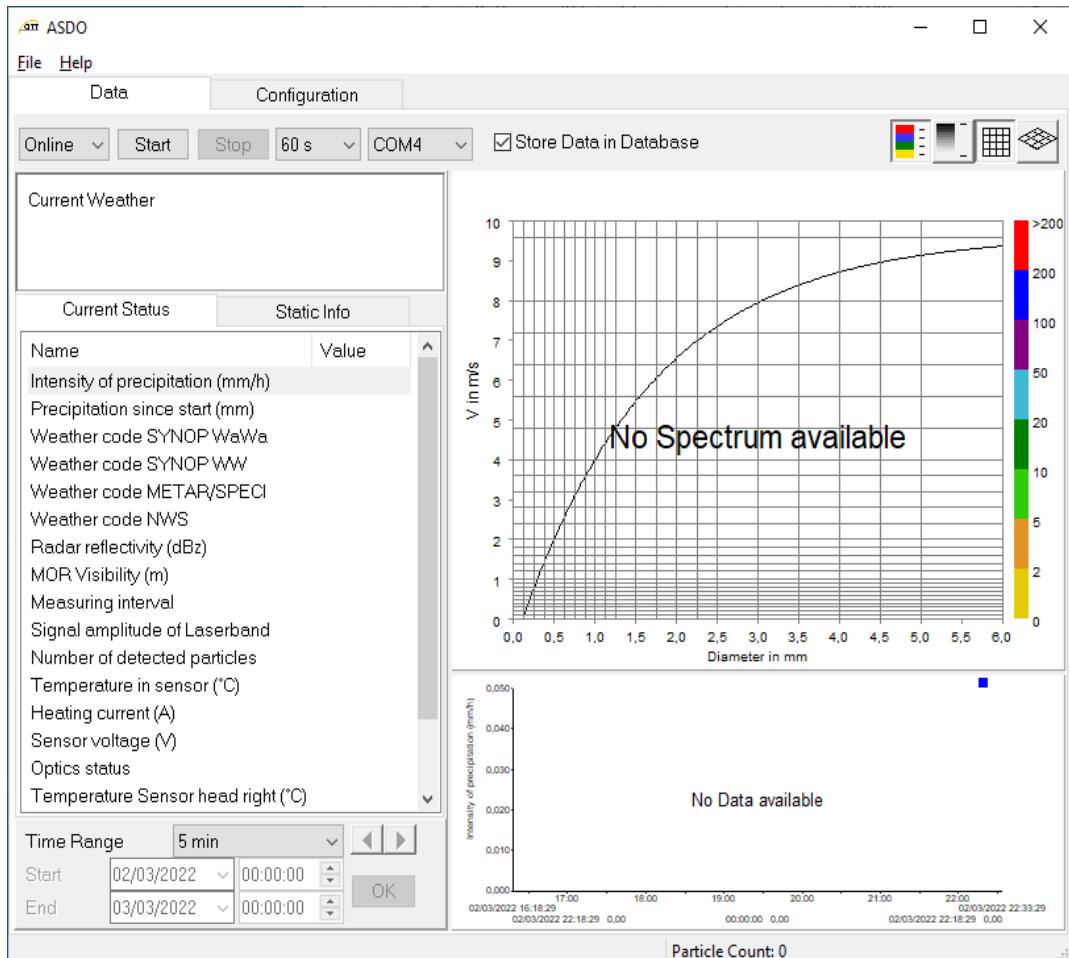


Figure 7. Data visualization page

### 3. Serial port configuration page :

- Select the COM port connected to the OTT Parsivel
- Select a baudrate equals to 19200
- Click on « write » in Parameter Set page



Figure 8. Serial port configuration page

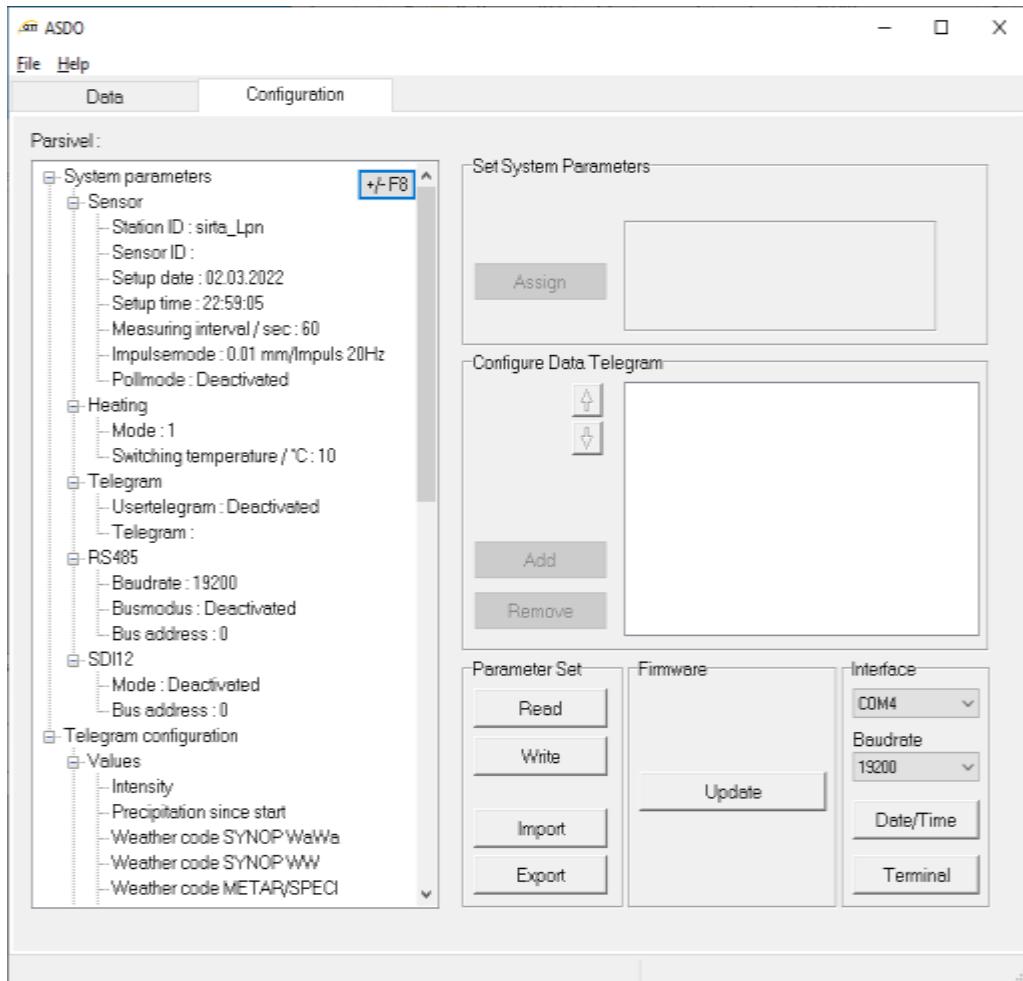


Figure 9. System parameter configuration page

#### 4. Export parameter page

New for version 1.15.

Click on export and save all the configuration parameter.



Figure 10. Export configuration page